

## Manual La Gard 1520



### GENERAL

The lock operates with a numeric six-digit code.

Each key press is confirmed with an audio and light signal. After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already entered part of the code is cancelled.

### To open

Enter code: i.e. 1-2-3-4-5-6 (factory code); unlock door and open. If not opened within 3 seconds, the lock secures automatically.

### Locking:

Close door and turn handle fully to closing position. The lock is secured. Control blocking status by trying to turn handle back.

### Manipulation protection:

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes restarts the 5 minute blocking period.


### Change code: with safe door open!!!

**Press and hold** key “0” until double signal. The light remains on during the following actions.

- enter old code (double signal)
- enter new code (double signal) and repeat new code (double signal)

In case of entry errors (long signal), the old code remains valid.

**Safety reference:** All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

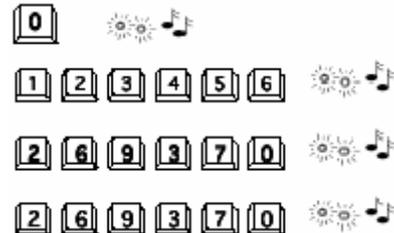

### What if...

...you hear a long beep after your combination last digit and the lock does not open?

*You are entering a not valid combination. Repeat the operation making attention you are entering the correct code.*

... light signal flashes every 10 seconds, and, when you push a button you hear a long beep?

*You entered 4 times a wrong combination and the lock is in time penalty. Wait 5 minutes and try again. Two more consecutive invalid codes will restart additional 5 minutes penalty period.*

... you do not hear any beep when you push a button?

*Replace the battery. If the problem is not solved, call your service centre.*

... you can open but you hear a long sequence of beeps after your combination last digit?

*Immediately replace the battery. (use only 9V Duracell batteries).*